
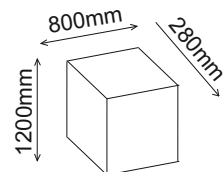
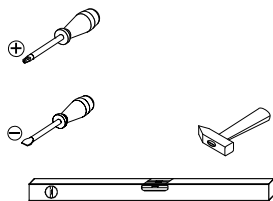
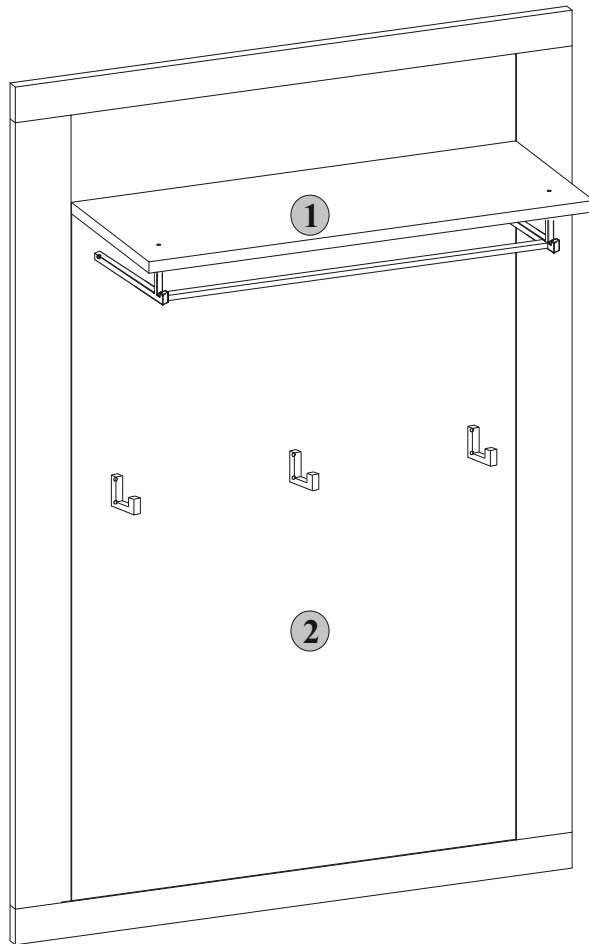


“3984”











versionsnummer: 05.12.2022

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.





B1		B2	
2x  φ8x40 mm t14	1x  z1	3x  g31	
4x  5x10.5 e3	2x  n3	1x  g33L	1x  g33R
3x  φ7x70 mm e3	3x  s1	1x  550 mm g34	10x  φ4x25 mm j30


1

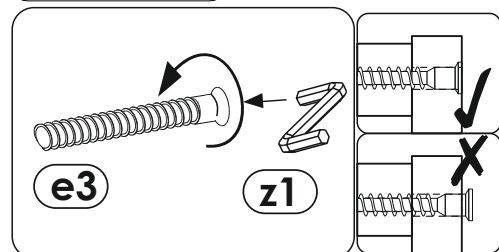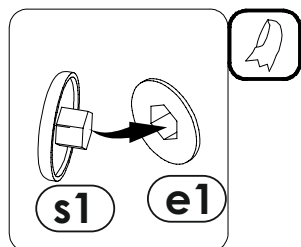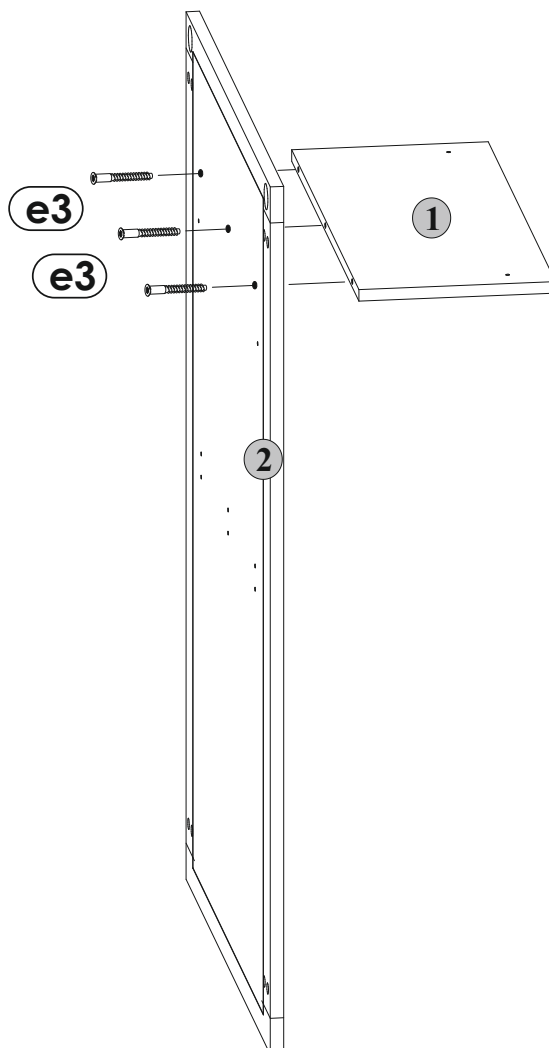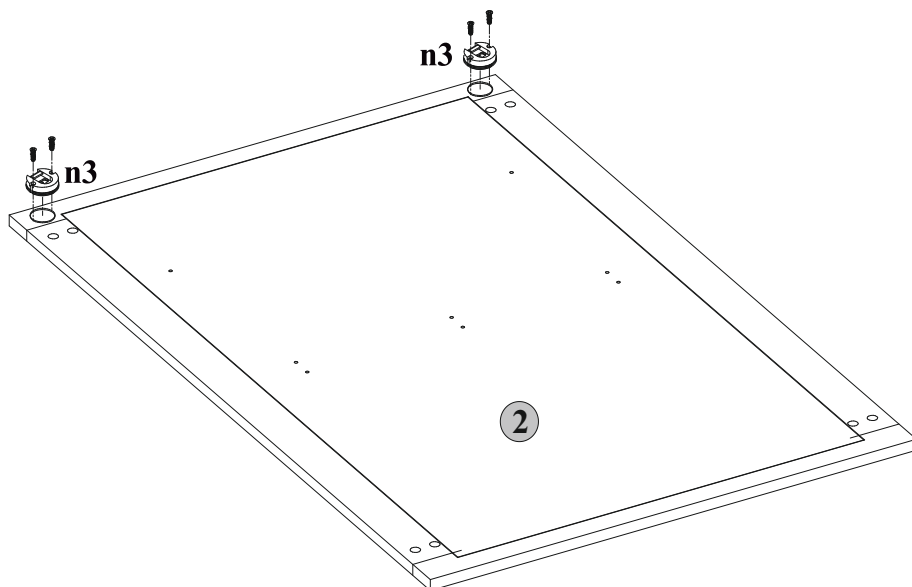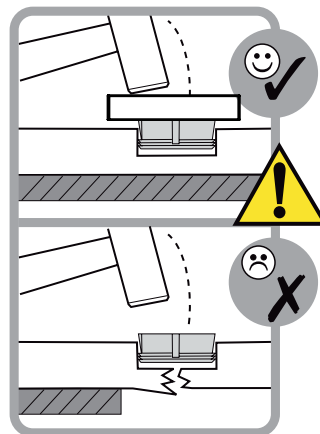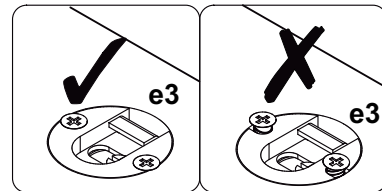

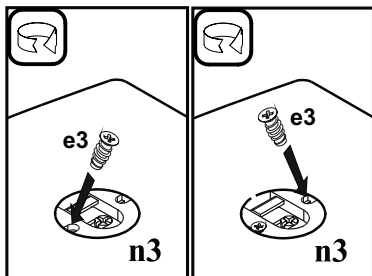


2

2

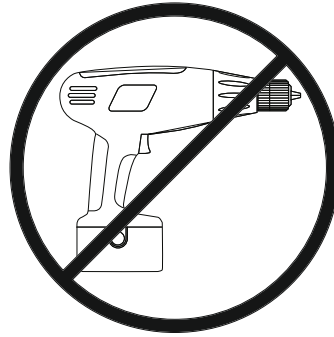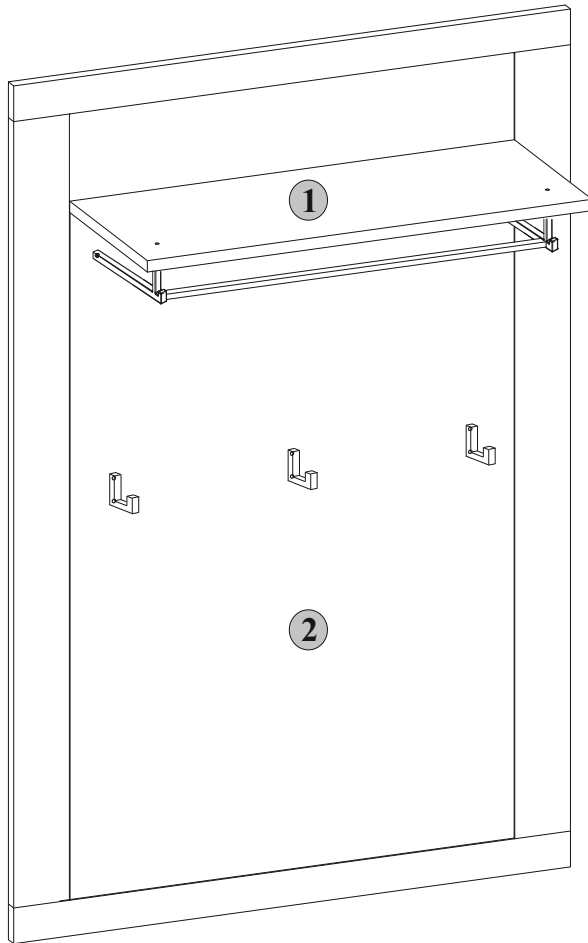












- 3x  g31
- 1x  g33L
- 1x  g33R
- 1x  550 mm g34
- 4x  $\phi 4 \times 25$ mm j30

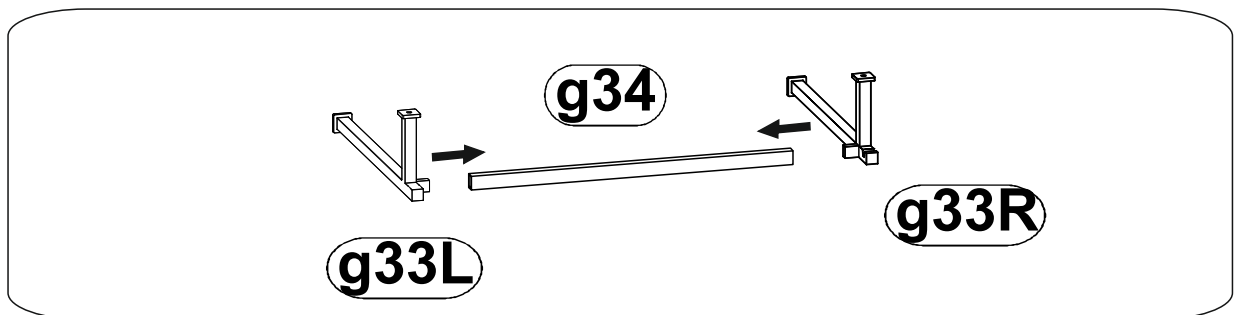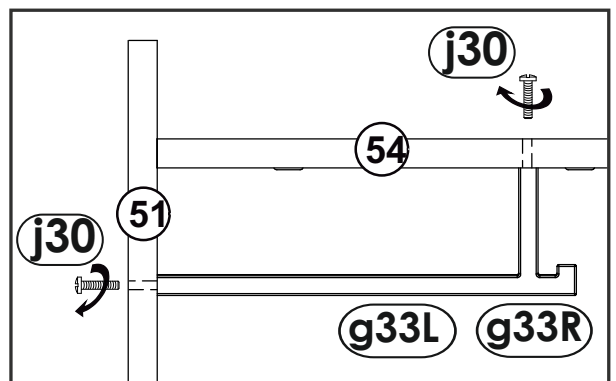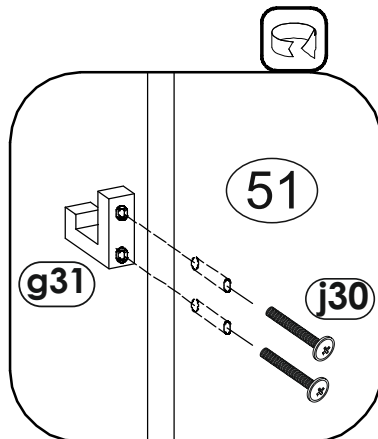

3

3

x2

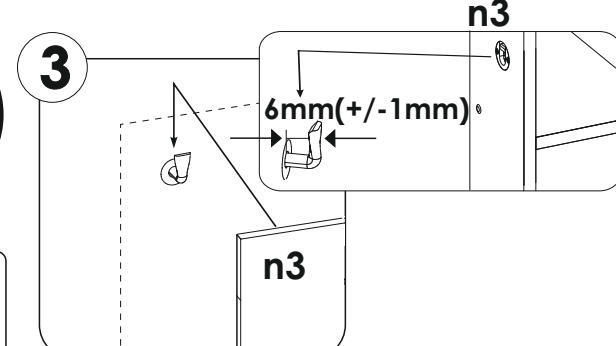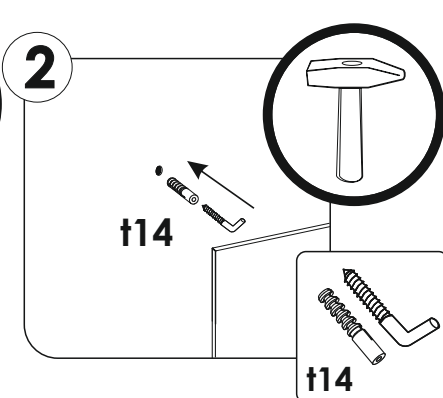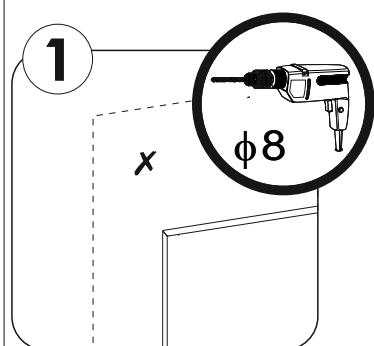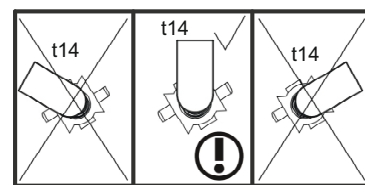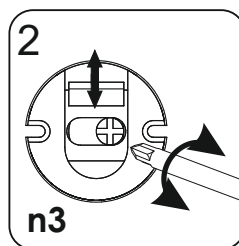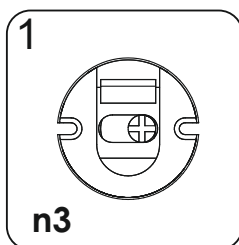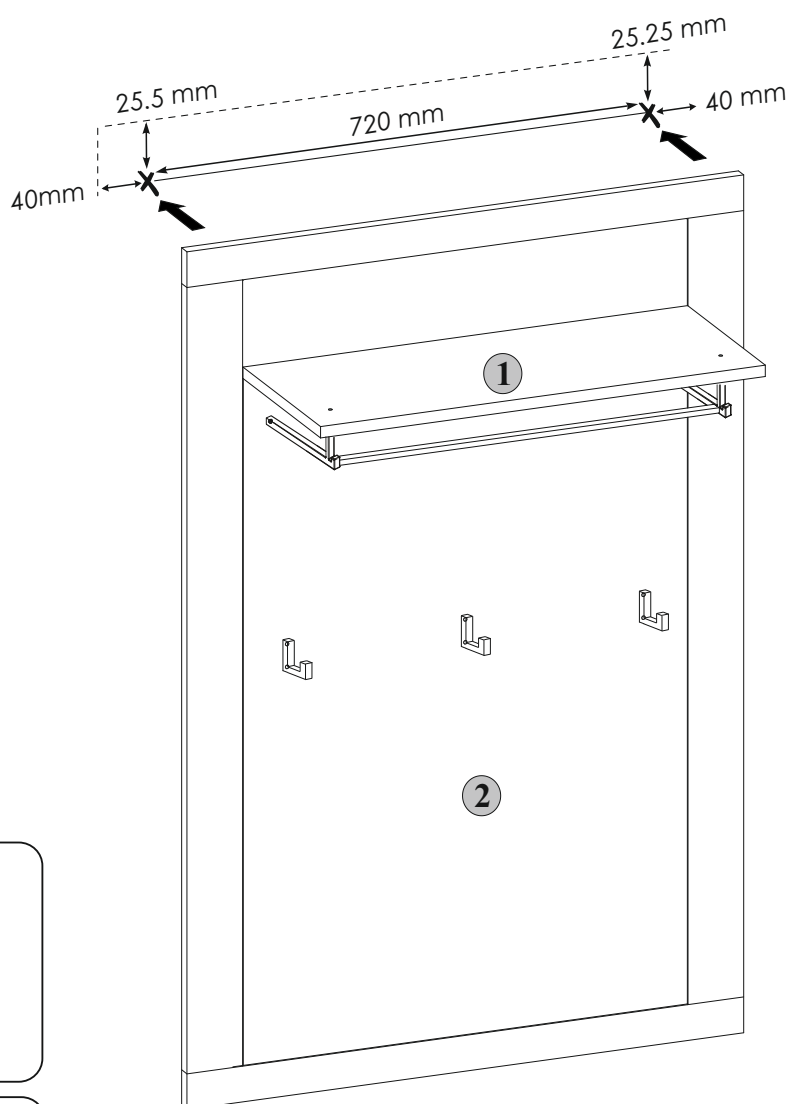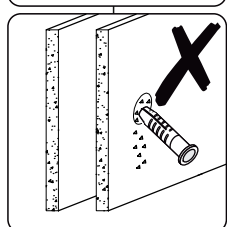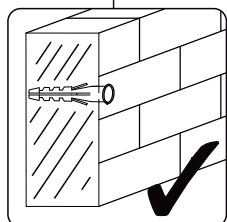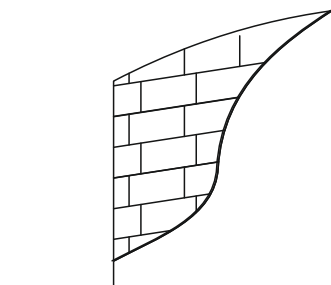 φ8x40 mm **t14**



4